

Golf/Jetta - Standard Equipment,

from January 2001

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations"

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

3 J207- Starting Interlock Relay (53)


Relay panel:


1 J4 - Dual Horn Relay (53)

2 J52 - Load Reduction Relay (100)

V J31 - Wiper/Washer Intermittent Relay (377)

VI J31 - Wiper/Washer Intermittent Relay (377)

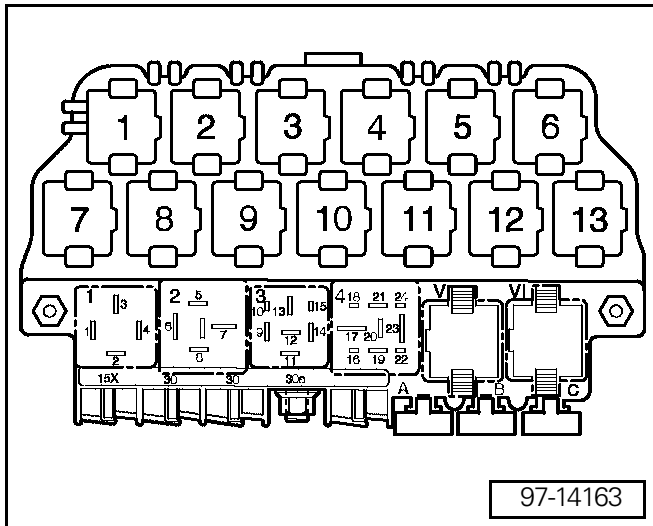

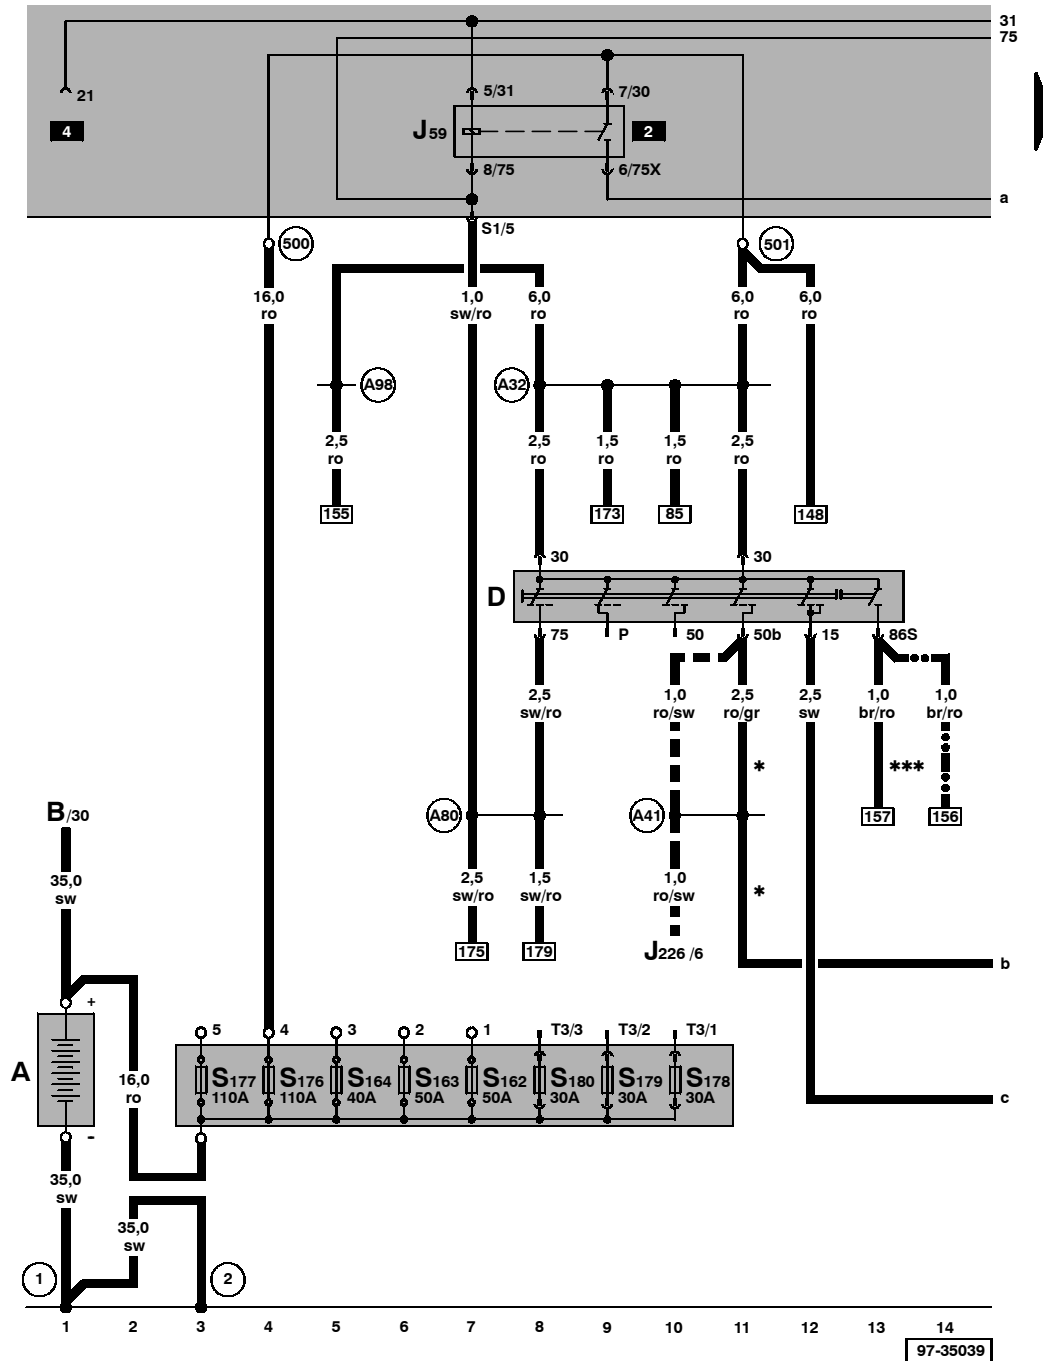


Battery, ignition/starter switch

- A - Battery
 - B - Starter
 - D - Ignition/Starter Switch
 - J59 - Load Reduction Relay
 - J226 - Park/Neutral Position (PNP) Relay
 - S162 - Fuse -1- (30) in fuse bracket/battery
 - S163 - Fuse -2- (30) in fuse bracket/battery
 - S164 - Fuse -3- (30) in fuse bracket/battery
 - S176 - Fuse -4- (30) in fuse bracket/battery
 - S177 - Fuse -5- (30) in fuse bracket/battery
 - S178 - Fuse -6- (30) in fuse bracket/battery
 - S179 - Fuse -7- (30) in fuse bracket/battery
 - S180 - Fuse -8- (30) in fuse bracket/battery
 - T3 - 3-Pin Connector
- ① - Ground strap, battery to body
 - ② - Ground strap, transmission to body
 - ⑤00 - Threaded connection -1- (30) on the relay plate
 - ⑤01 - Threaded connection -2- (30) on the relay plate
 - A32 - Plus connection (30), in instrument panel wiring harness
 - A41 - Plus connection (50), in instrument panel wiring harness (gasoline engine only) through April 2001
 - A80 - Connection -1- (X), in instrument panel wiring harness
 - A98 - Plus connection -4- (30), in instrument panel wiring harness
- * - Manual transmission only, (not 2.0L-Engine - code BBW. Different wiring ⇒ wiring diagram Motor)
 - Automatic transmission only
 - *** - Beginning November 2001
 - .-.- Through October 2001
- ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-35039

Instrument cluster, clutch pedal position (CPP) switch, starting interlock relay

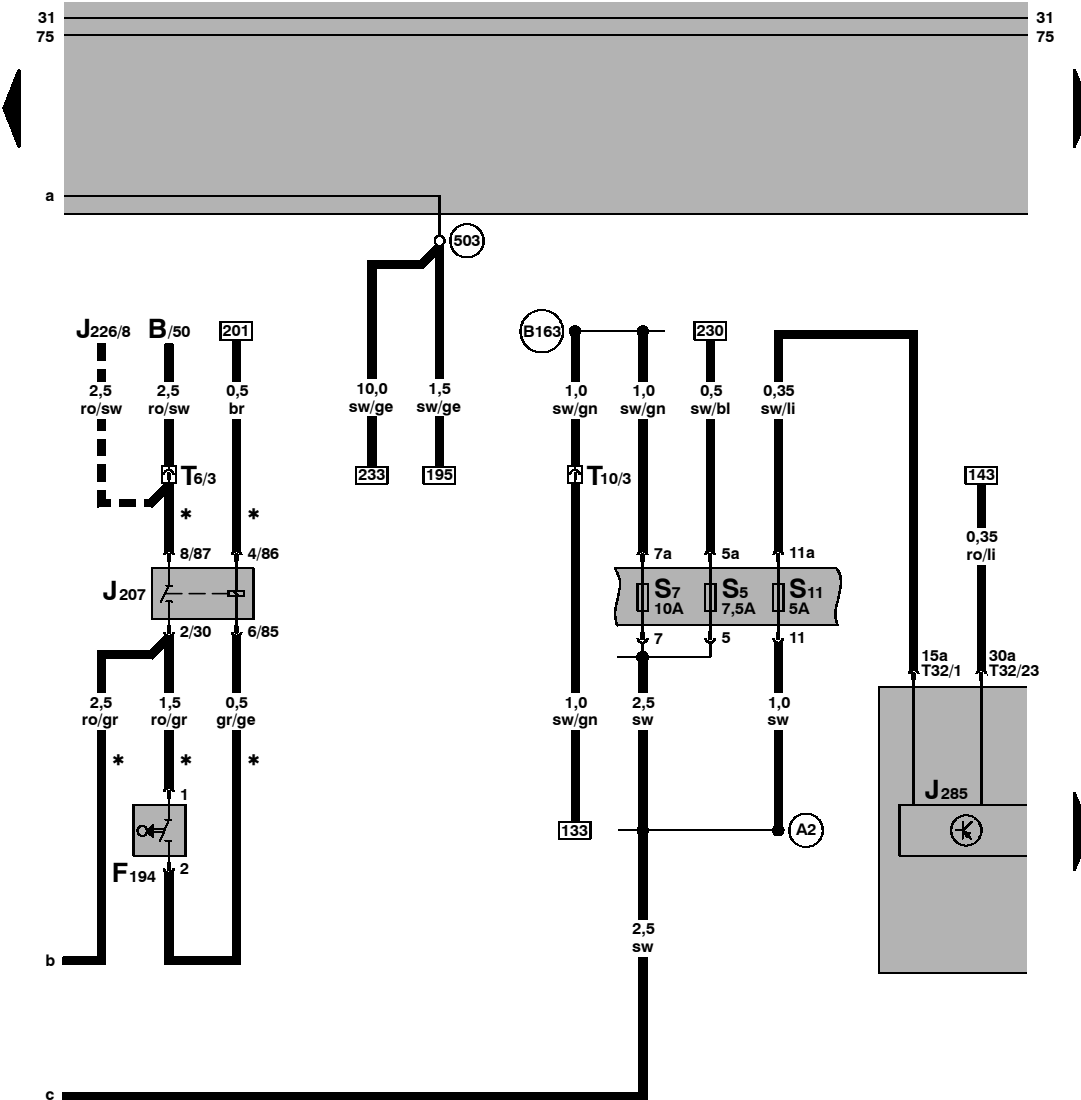


- B - Starter
- F194 - Clutch Pedal Position (CPP) Switch*
- J207 - Starting Interlock Relay*
- J226 - Park/Neutral Position (PNP) Relay
- J285 - Control module with indicator unit in instrument panel insert
- S5 - Fuse 5 in fuse holder
- S7 - Fuse 7 in fuse holder
- S11 - Fuse 11 in fuse holder
- T6 - 6-Pin Connector, brown, in protective housing for connectors, in plenum chamber, left
- T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left
- T32 - 32-Pin Connector, blue
- 503 - Threaded connection -2- (75x) on the relay plate
- A2 - Plus connection (15), in instrument panel wiring harness
- B163 - Plus connection -1- (15) in wiring harness interior
- * - Manual transmission only, (not 2.0L-Engine - code BBW. Different wiring => wiring diagram Motor)
- Automatic transmission only

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange


Instrument cluster, tachometer, speedometer, odometer display, anti-theft immobilizer, warning light for anti-theft immobilizer sensor

- D2 - Induction coil of anti-theft immobilizer
 - G5 - Tachometer
 - G21 - Speedometer
 - G22 - Speedometer Vehicle Speed Sensor
 - J217 - Transmission Control Module (TCM)
 - J285 - Control module with indicator unit in instrument panel insert
 - J362 - Control module for anti-theft immobilizer
 - J... - Engine Control Module (ECM)
 - K117 - Warning light for anti-theft immobilizer sensor
 - L75 - Digital Display Light
 - T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left
 - T10h - 10-Pin Connector, blue, in protective housing for connectors, in plenum chamber, left
 - T14a - 14-Pin Connector, in engine compartment, in wiring duct, left
 - T32 - 32-Pin Connector, blue
 - T32a - 32-Pin Connector, green
 - T68a - 68-Pin Connector, on Transmission Control Module (TCM)
 - Y4 - Odometer Display
- (A27) - Wire connection (vehicle speed signal), in instrument panel wiring harness
- * - 4 speed automatic transmission/ manual transmission
 - - - 5 speed automatic transmission
 - *** - Through April 20002

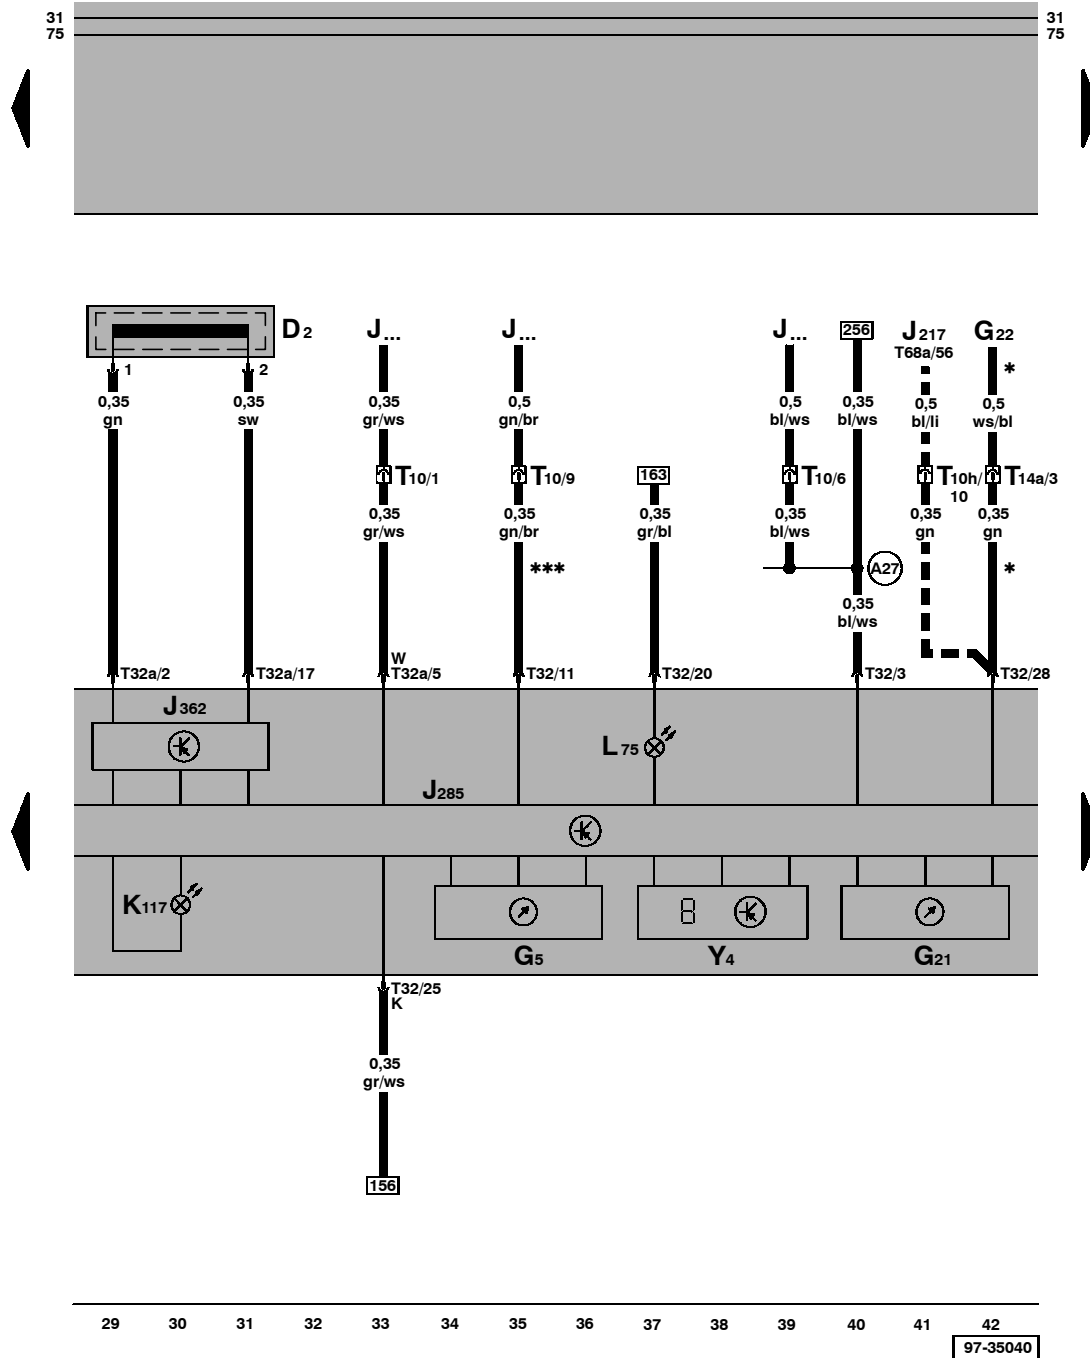

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Instrument cluster, generator (GEN) warning light, low fuel level warning light, warning light for rear lid unlocked/door ajar indicator lamp

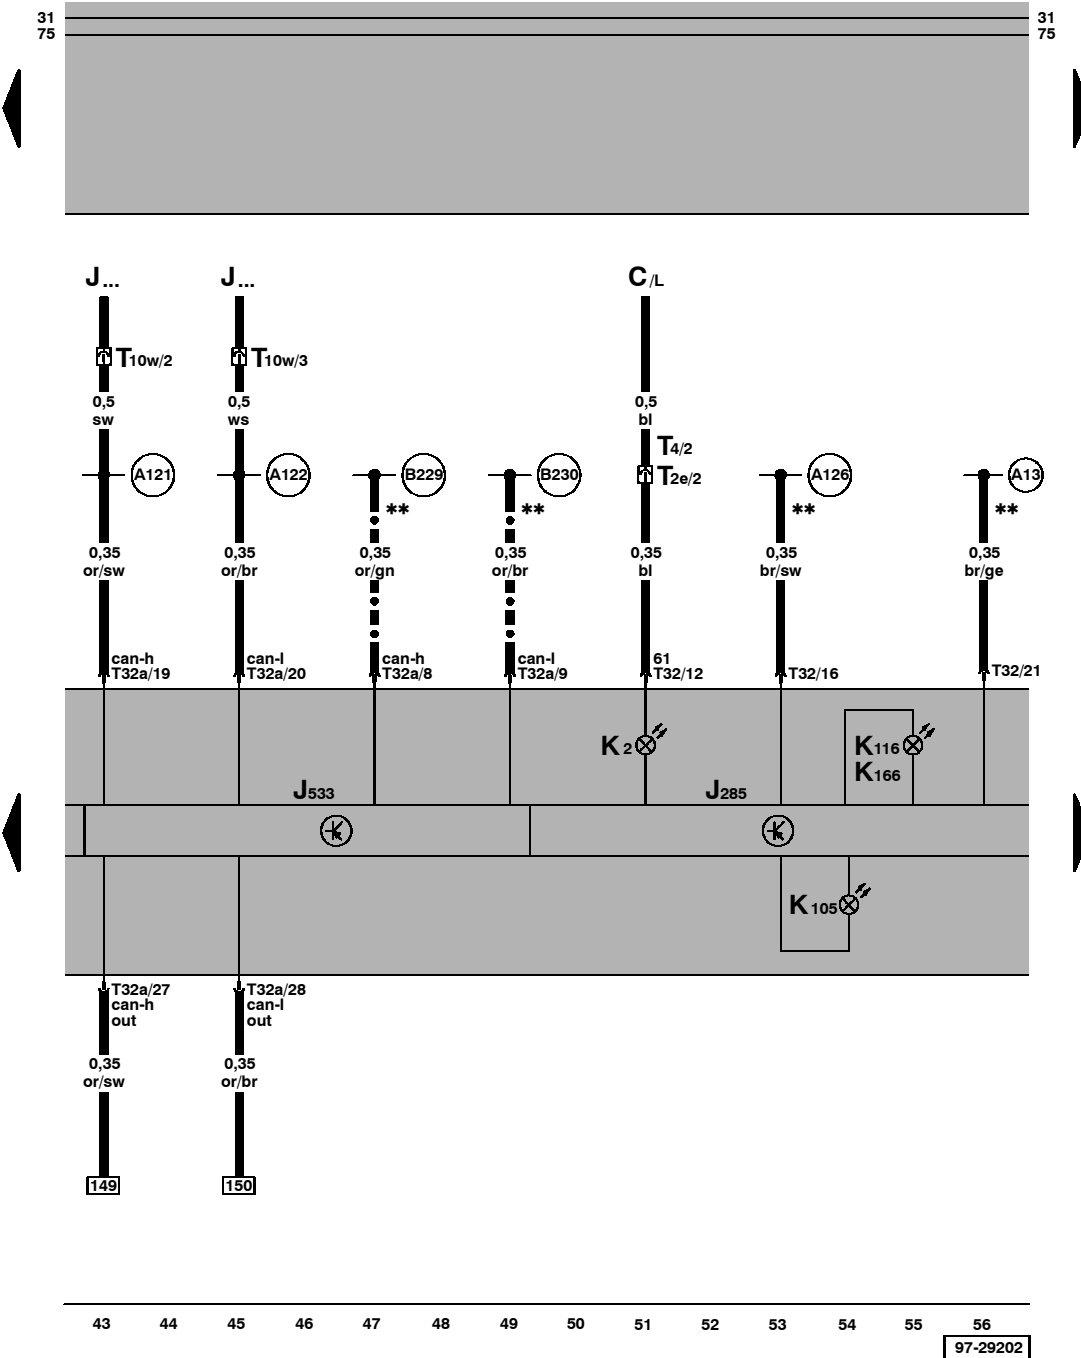

- C - Generator (GEN)
- J285 - Control module with indicator unit in instrument panel insert
- J533 - Data Bus On Board Diagnostic Interface
- J... - Engine Control Module (ECM)
- K2 - Generator (GEN) Warning Light
- K105 - Low Fuel Level Warning Light
- K116 - Warning light for rear lid unlocked (through April 2001)
- K166 - Door Ajar Indicator Lamp (from May 2001)
- T2e - Double Connector, near starter (in vehicles without air conditioning)
- T4 - 4-Pin Connector, near starter (in vehicles with air conditioning)
- T10w - 10-Pin Connector, white, in protective housing for connectors, in plenum chamber, left
- T32 - 32-Pin Connector, blue
- T32a - 32-Pin Connector, green

- (A13) - Wire connection (door contact switch) in instrument panel wiring harness**
- (A121) - Connection (high bus), in instrument panel wiring harness
- (A122) - Connection (low bus), in instrument panel wiring harness
- (A126) - Connection (contact switch in rear lid) in instrument panel wiring harness**
- (B229) - Connection (high bus), in instrument panel wiring harness**
- (B230) - Connection (low bus), in instrument panel wiring harness**

- ** - See also wiring diagram Comfort System
- - Beginning May 2001

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

43 44 45 46 47 48 49 50 51 52 53 54 55 56


97-29202

Instrument cluster, left front brake pad wear sensor, brake pad wear indicator light, headlight high beam indicator light, digital clock

- G34 - Left Front Brake Pad Wear Sensor
- H3 - Warning buzzer
- J285 - Control module with indicator unit in instrument panel insert
- K1 - Headlight High Beam Indicator Light
- K32 - Brake Pad Wear Indicator Light
- S22 - Fuse 22 in fuse holder
- S223 - Fuse 23 in fuse holder
- T2c - Double Connector, near left front brake pad wear sensor
- T32 - 32-Pin Connector, blue
- T32a - 32-Pin Connector, green
- Y2 - Digital Clock

- (A51) - Wire connection (56), in instrument panel wiring harness
- (A84) - Connection (58L) in instrument panel wiring harness
- (A85) - Connection (58R) in instrument panel wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

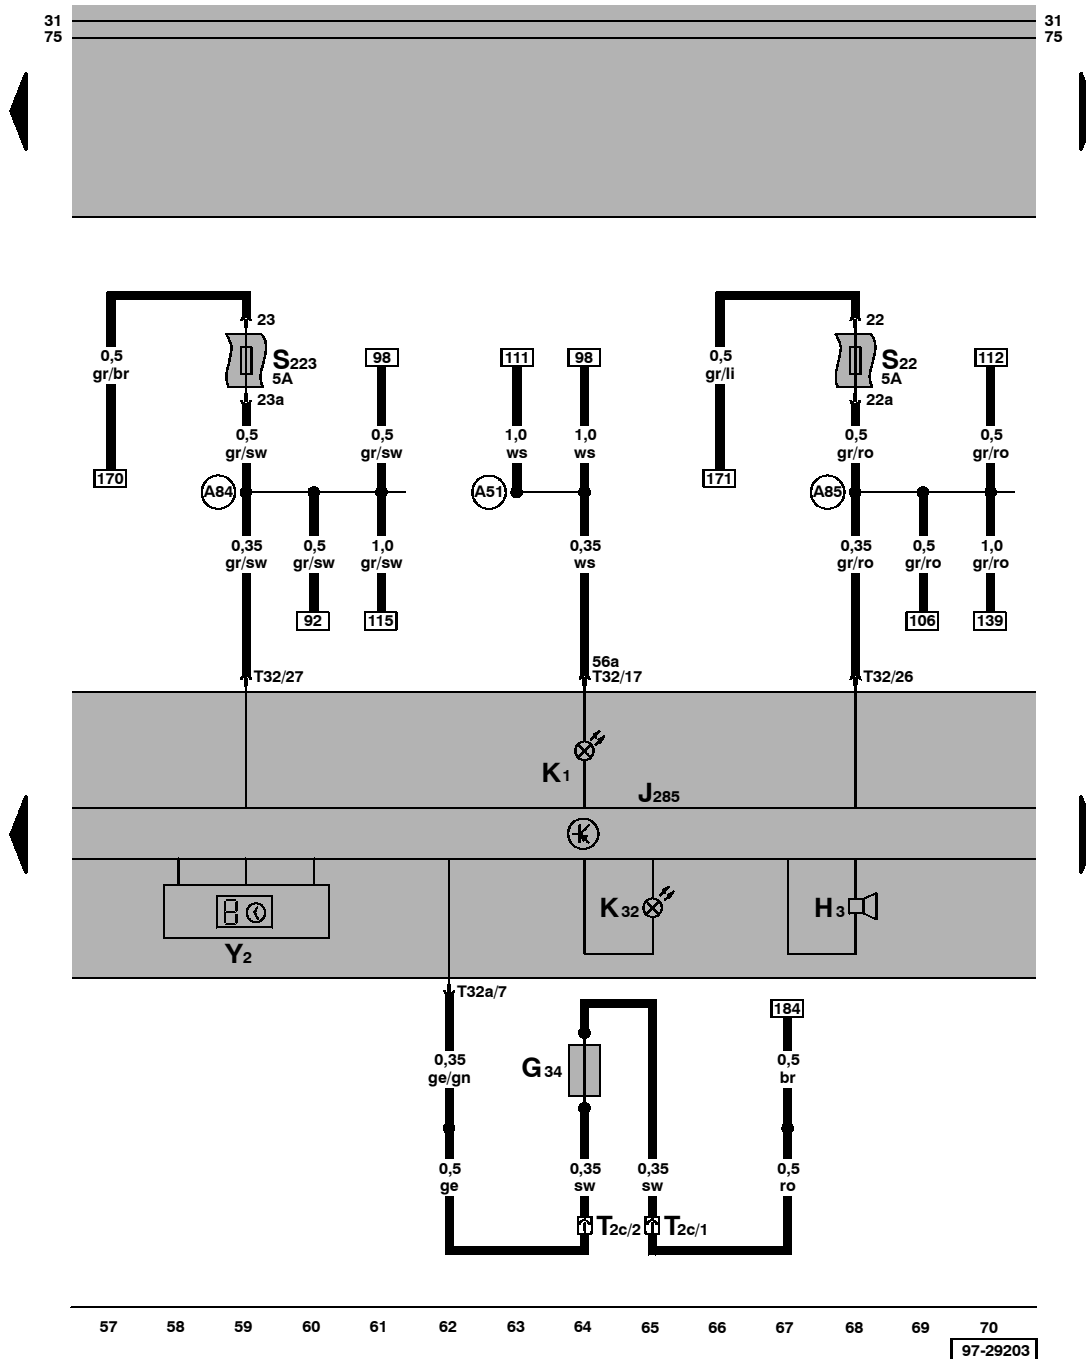


Instrument cluster, parking brake warning light switch, brake fluid level warning switch, low windshield washer fluid level indication, left and right turn signal indicator lights

- F9 - Parking Brake Warning Light Switch
- F34 - Brake Fluid Level Warning Switch
- G33 - Windshield Washer Fluid Level Sensor
- J285 - Control module with indicator unit in instrument panel insert
- K37 - Low Windshield Washer Fluid Level Indicator Light
- K65 - Left Turn Signal Indicator Light
- K94 - Right Turn Signal Indicator Light
- K118 - Warning light for brake system
- T32 - 32-Pin Connector, blue
- T32a - 32-Pin Connector, green

- (119) - Ground connection -1-, in headlight wiring harness
- (269) - Ground connection (sensor ground) -1-, in instrument panel wiring harness
- (A5) - Plus connection (right turn signal), in instrument panel wiring harness
- (A6) - Plus connection (left turn signal), in instrument panel wiring harness

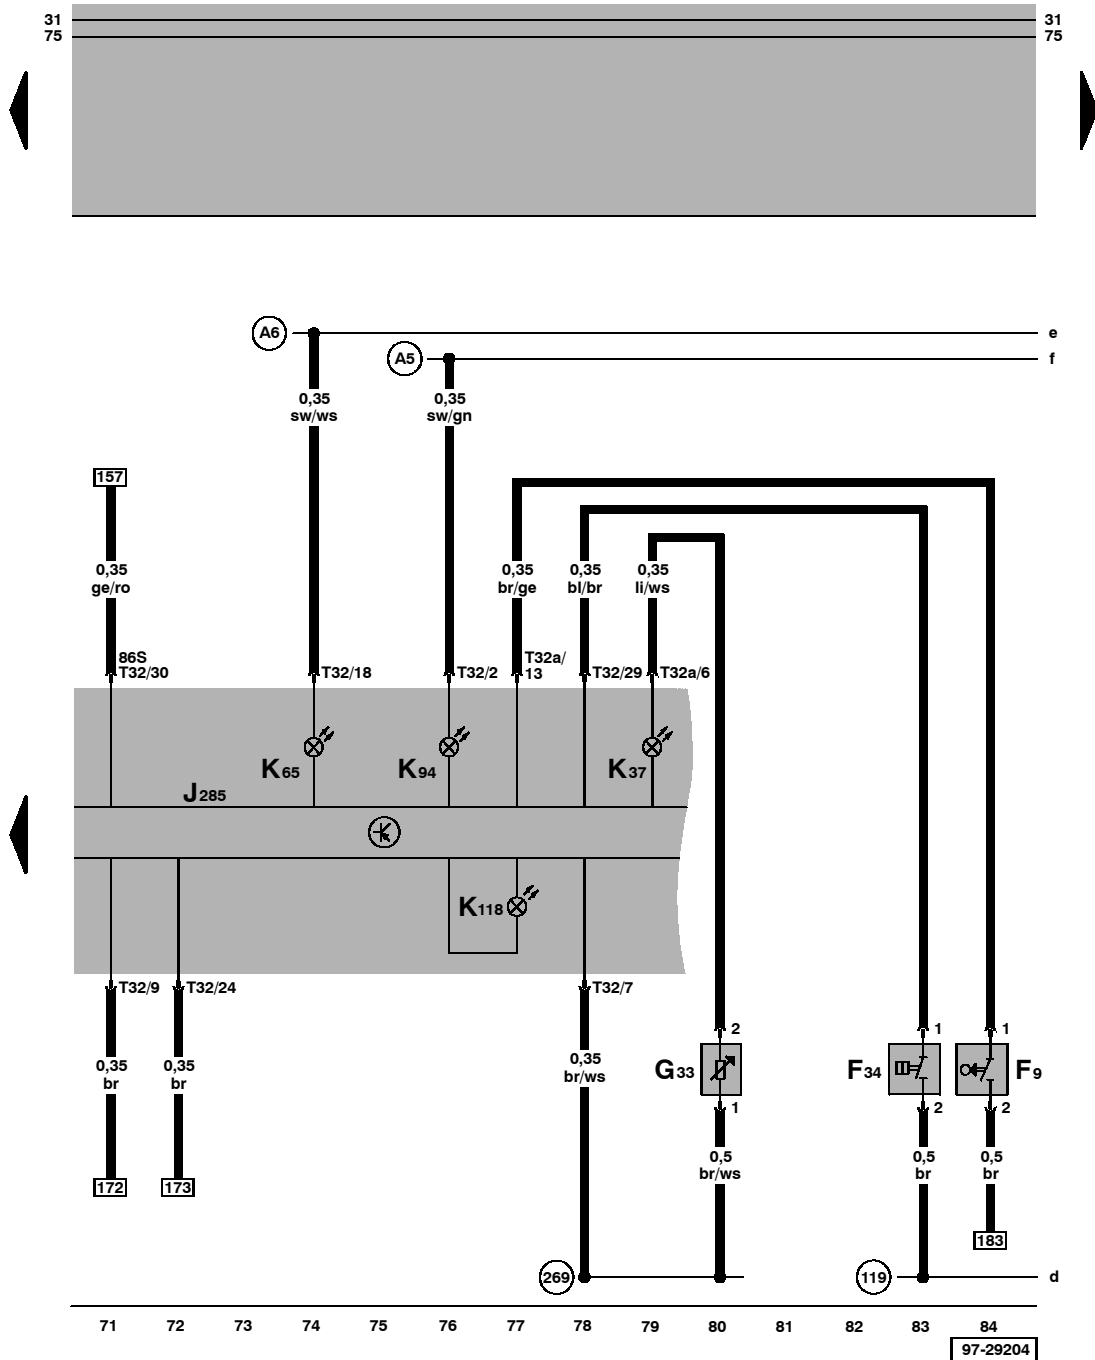

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange



97-29204


Turn signal switch, headlight dimmer/flasher switch, left front turn signal light, light for side marker front left, left headlight

- E2 - Turn signal switch
- E4 - Headlight Dimmer/Flasher Switch
- E19 - Park Light Switch
- L1 - Left Headlight*
- M1 - Left Parking Light
- M5 - Left Front Turn Signal Light
- M18 - Left, Side Turn Signal Light
- M29 - Left Low Beam Headlight (Golf only)
- M30 - Left High Beam Headlight (Golf only)
- M33 - Light for side marker front left
- S18 - Fuse 18 in fuse holder
- S19 - Fuse 19 in fuse holder
- S21 - Fuse 21 in fuse holder
- T10b - 10-Pin Connector
- T12 - 12-Pin Connector

-  - Connection (56a) in passenger compartment wiring harness
-  - Connection (56b) in passenger compartment wiring harness

- * - Jetta only
- Vehicles with daytime running lights
⇒ wiring diagram No. 61

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange

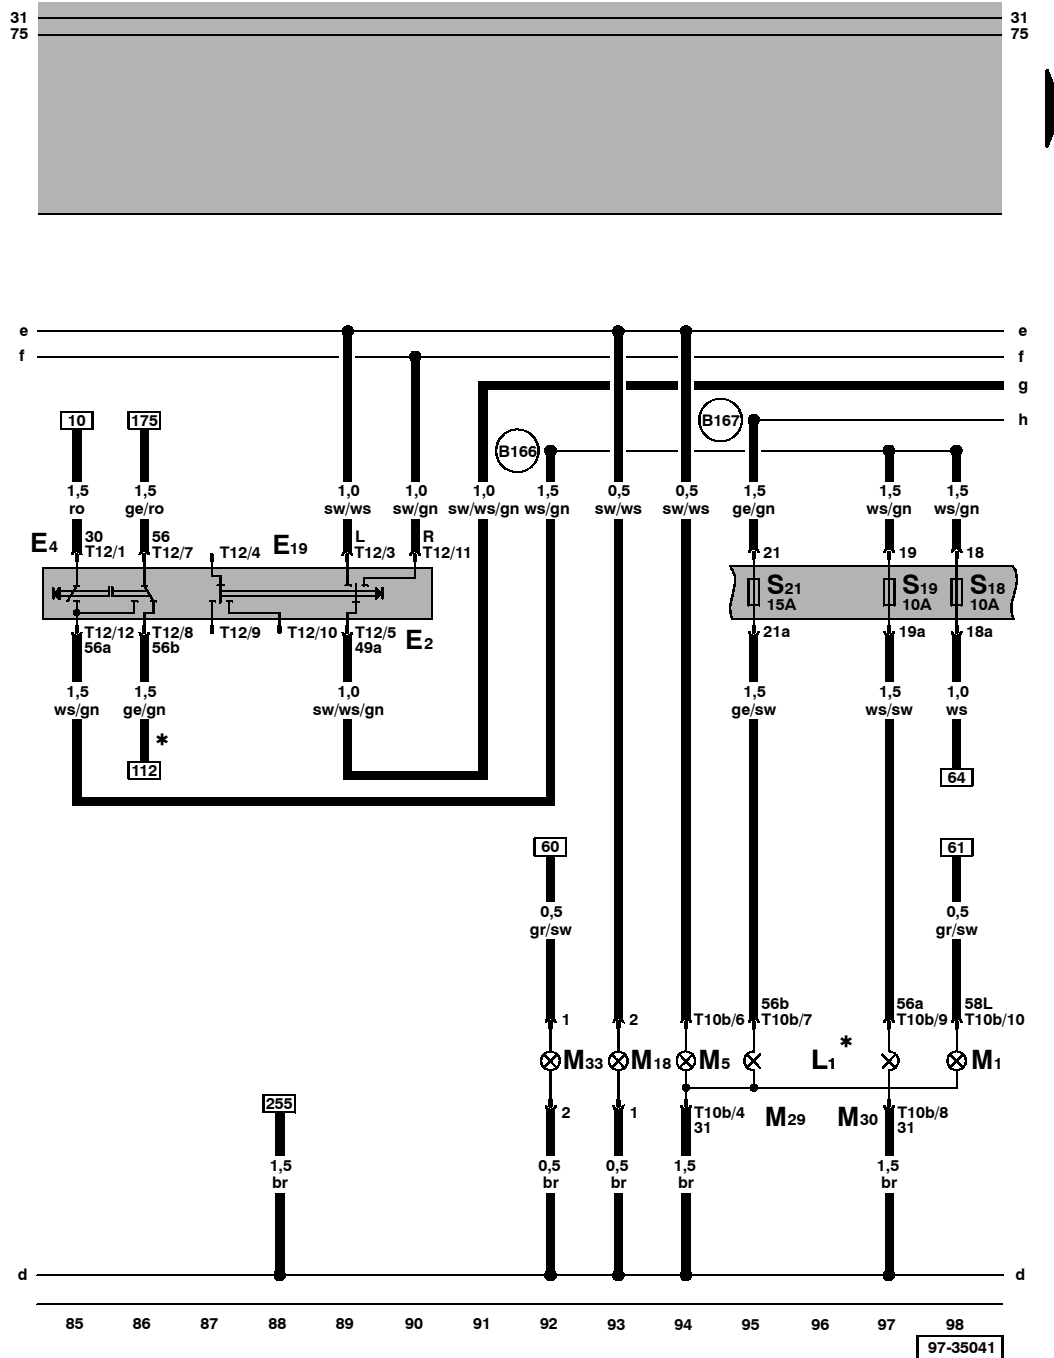

97-35041


Emergency flasher switch, turn signal relay, right front turn signal light, light for side marker front right, right headlight

- E3 - Emergency Flasher Switch**
- J1 - Turn Signal Relay
- K6 - Indicator light for emergency flasher system
- L2 - Right Headlight*
- M3 - Right Parking Light
- M7 - Right Front Turn Signal Light
- M19 - Right, Side Turn Signal Light
- M31 - Right Low Beam Headlight (Golf only)
- M32 - Right High Beam Headlight (Golf only)
- M34 - Light for side marker front right
- S20 - Fuse 20 in fuse holder
- T8d - 8-Pin Connector
- T10c - 10-Pin Connector


- (12) - Ground connection, in engine compartment, left
- (119) - Ground connection -1-, in headlight wiring harness
- (120) - Ground connection -2-, in headlight wiring harness
- (B167) - Connection (56b), in passenger compartment wiring harness

- * - Jetta only
- - - - - Golf only
- Vehicles with daytime running lights ⇒ wiring diagram No. 61
- ** - Vehicles with Telematic system ⇒ wiring diagram Telematic

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

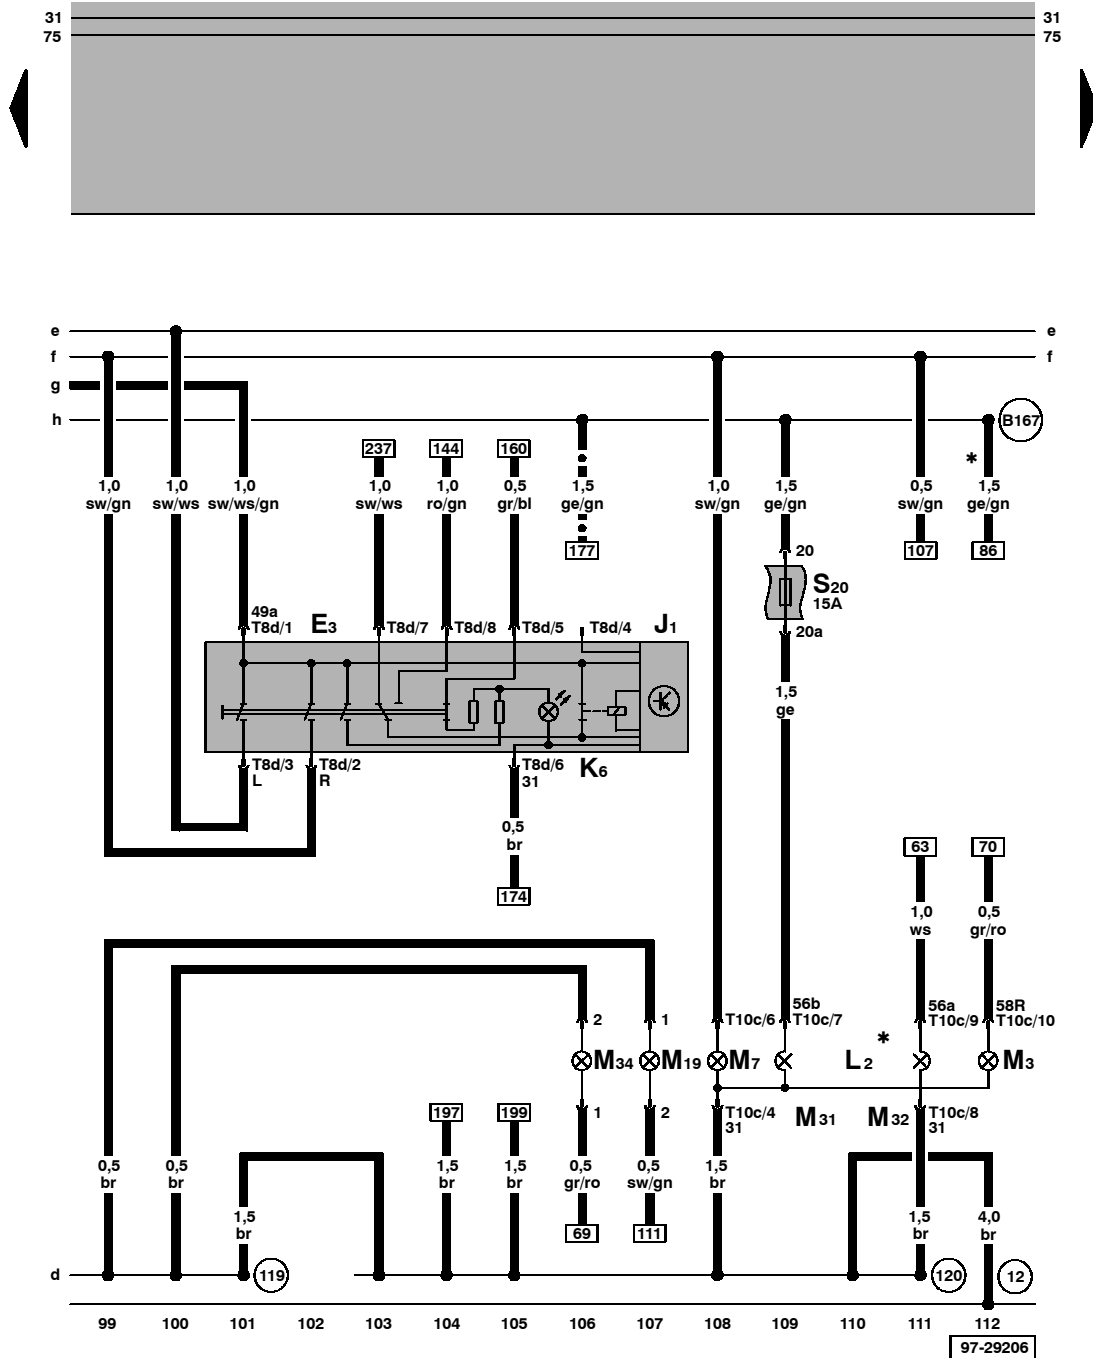

Left rear turn signal light, left back-up light, left brake/tail light, high-mount brake light (Golf only)

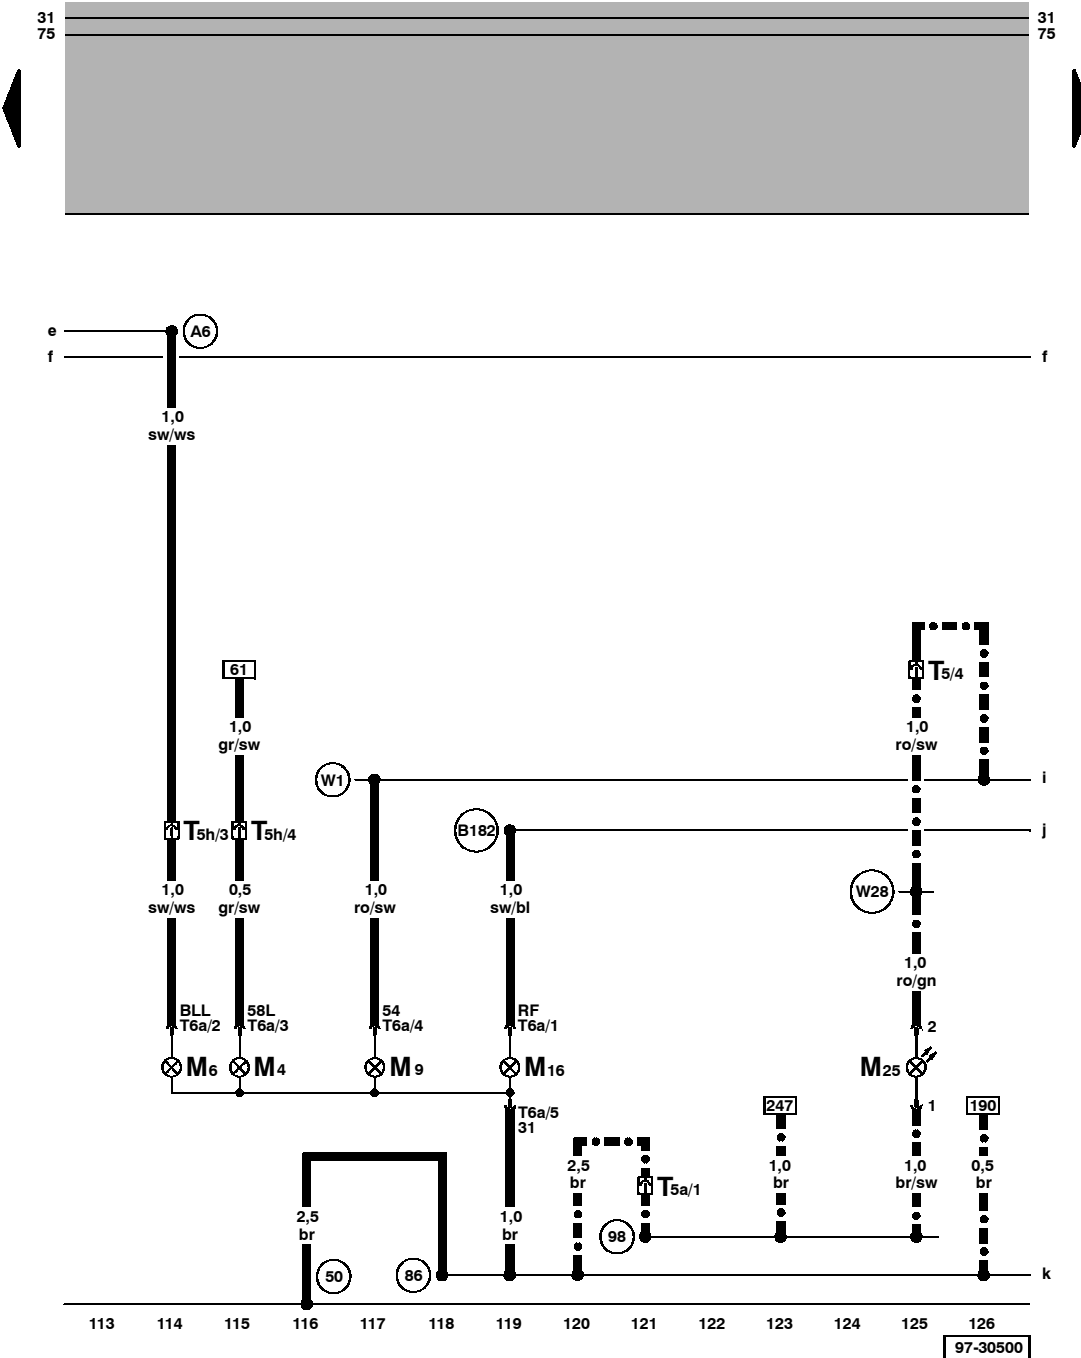


- M4 - Left Tail Light
- M6 - Left Rear Turn Signal Light
- M9 - Left Brake Light
- M16 - Left Back-Up Light
- M25 - High-mount Brake Light (32 light emitting diodes)
- T5 - 5-Pin Connector, black, connector station C-pillar, left
- T5a - 5-Pin Connector, pink, connector station C-pillar, left (Golf only)
- T5h - 5-Pin Connector, near left A-pillar, lower part, in harness
- T6a - 6-Pin Connector

- (50) - Ground connection, in luggage compartment, left
- (86) - Ground connection -1-, in rear wiring harness
- (98) - Ground connection, in rear lid wiring harness
- (A6) - Plus connection (left turn signal), in instrument panel wiring harness
- (B182) - Connection (RF), in passenger compartment wiring harness
- (W1) - Plus connection -1- (54), in rear wiring harness
- (W28) - Plus connection -2- (54), in wiring harness taillight assembly

----- Golf only


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-30500

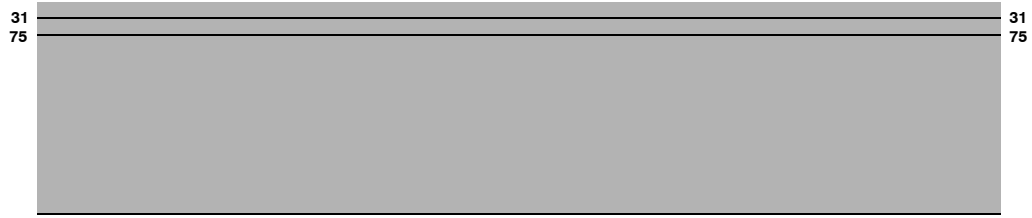

Back-up light switch, brake light switch, right rear turn signal light, right back-up light, right brake/tail light

- F - Brake Light Switch
- F4 - Back-Up Light Switch
- J226 - Park/Neutral Position (PNP) Relay
- M2 - Right Tail Light
- M8 - Right Rear Turn Signal Light
- M10 - Right Brake Light
- M17 - Right Back-Up Light
- M25 - High-mount Brake Light (18 light emitting diodes)*
- T5h - 5-Pin Connector, near left A-pillar, lower part, in harness
- T5i - 5-Pin Connector, near left A-pillar, lower part, in harness
- T6b - 6-Pin Connector
- T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left

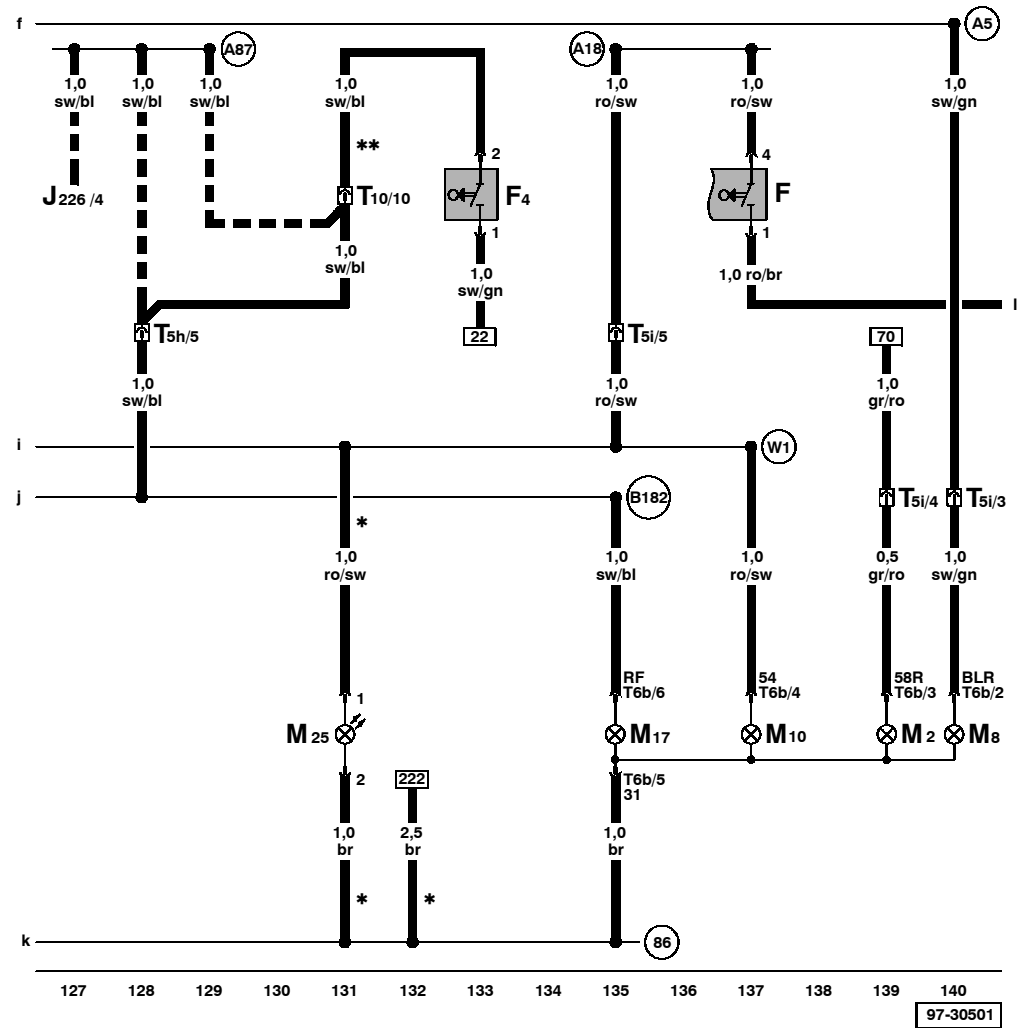

- (86) - Ground connection -1-, in rear wiring harness
- (A5) - Plus connection (right turn signal), in instrument panel wiring harness
- (A18) - Wire connection (54), in instrument panel wiring harness
- (A87) - Connection (reverse lamp), in instrument panel wiring harness
- (B182) - Connection (RF), in passenger compartment wiring harness
- (W1) - Plus connection -1- (54), in rear wiring harness

- * - Jetta only
- ** - Manual transmission only
- Automatic transmission only


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-30501

Data Link Connector (DLC)


- S12 - Fuse 12 in fuse holder
- S13 - Fuse 13 in fuse holder
- S15 - Fuse 15 in fuse holder
- S238 - Fuse 38 in fuse holder
- S239 - Fuse 39 in fuse holder
- T16 - Data Link Connector (DLC), below instrument panel, left

- (81) - Ground connection -1-, in instrument panel wiring harness
- (A76) - Connection (K-diagnosis wire) in instrument panel wiring harness
- (B156) - Plus connector (30a), in wiring harness interior

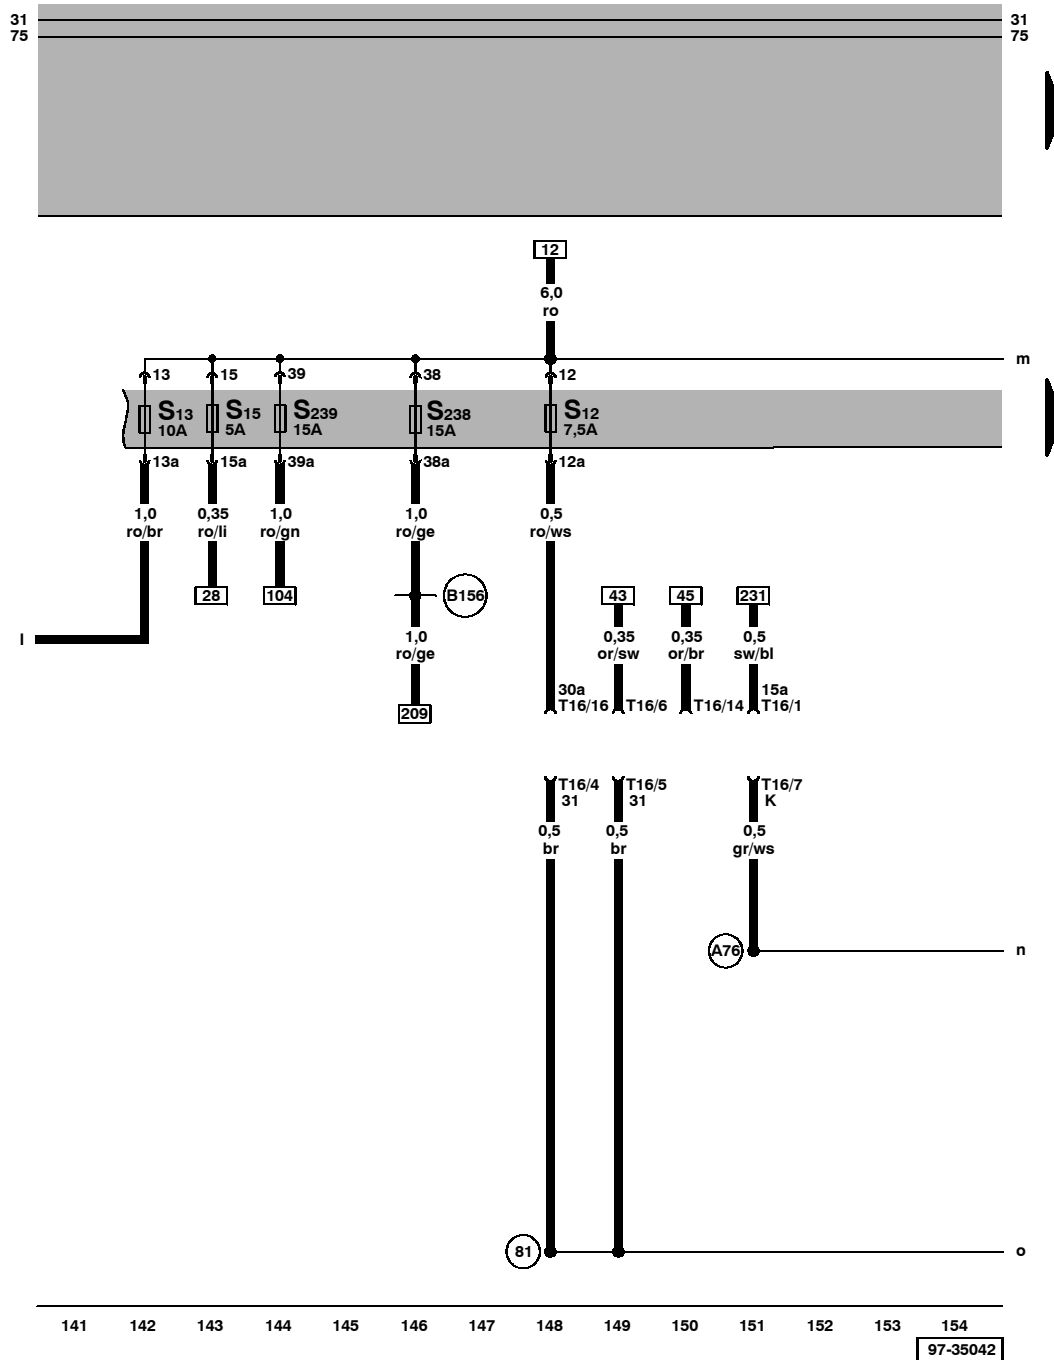

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Radio connection, cigarette lighter, instrument panel vent illumination

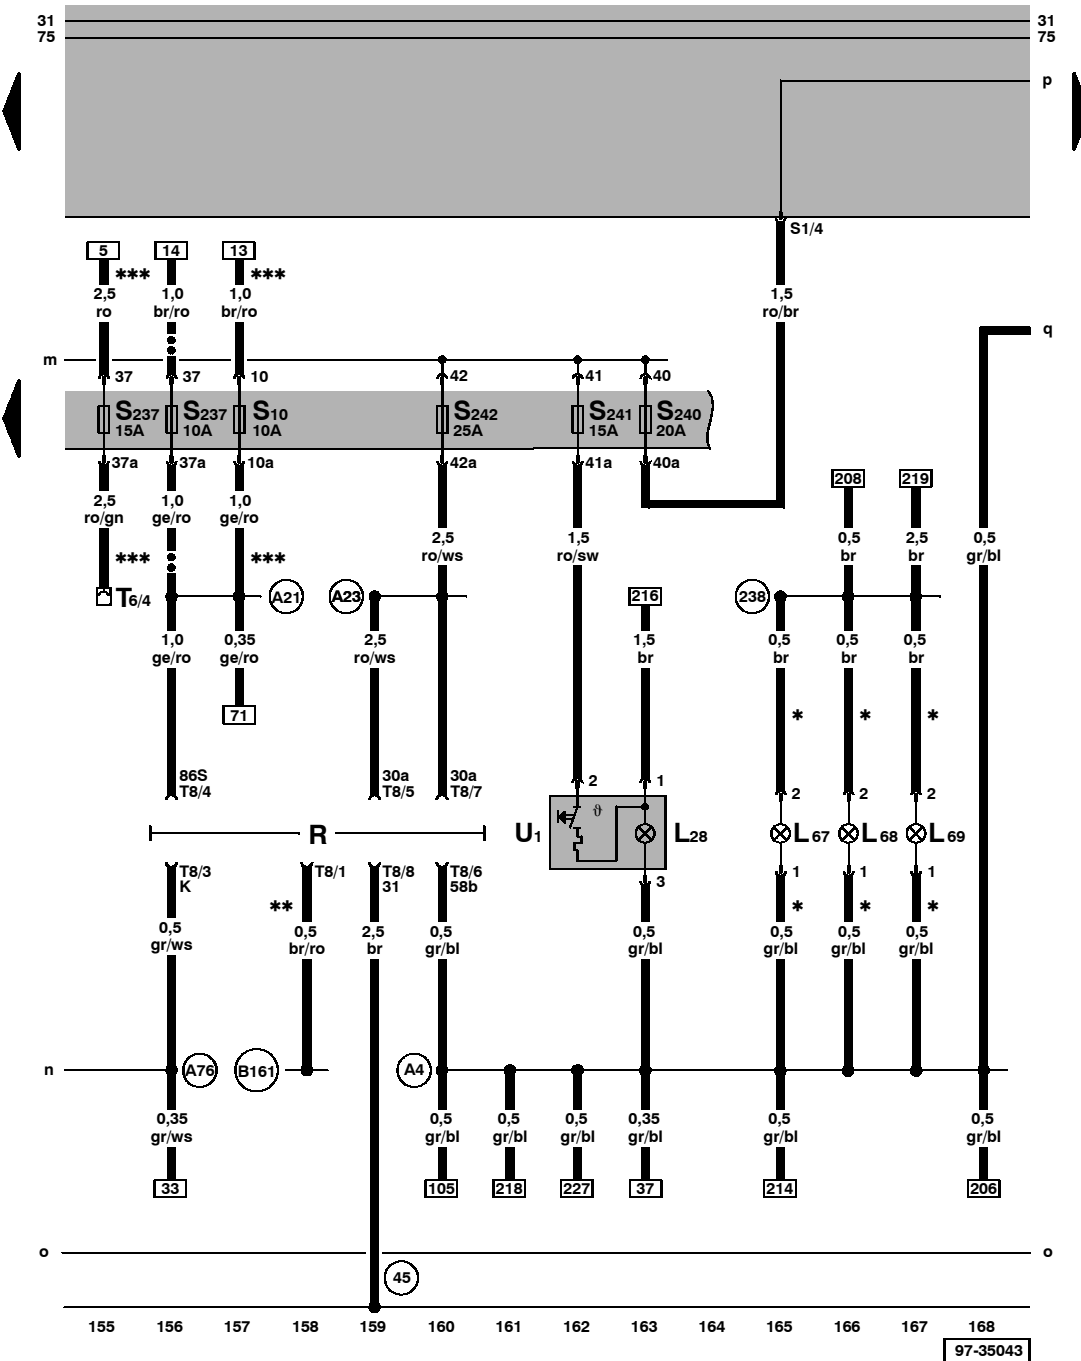

- L28 - Cigarette Lighter Light
- L67 - Left Instrument Panel Vent Illumination
- L68 - Center Instrument Panel Vent Illumination
- L69 - Right Instrument Panel Vent Illumination
- R - Radio****
- S10 - Fuse 10 in fuse holder
- S237 - Fuse 37 in fuse holder
- S240 - Fuse 40 in fuse holder
- S241 - Fuse 41 in fuse holder
- S242 - Fuse 42 in fuse holder
- T6 - 6-Pin Connector, brown, in protective housing for connectors, in plenum chamber, left
- T8 - 8-Pin Connector****
- U1 - Cigarette Lighter

- (45) - Ground connection, behind instrument panel, center
- (238) - Ground connection -1-, in wiring harness interior
- (A4) - Plus connection (58b), in instrument panel wiring harness
- (A21) - Wire connection (86s), in instrument panel wiring harness
- (A23) - Wire connection (30a), in instrument panel wiring harness
- (A76) - Connection (K-diagnosis wire) in instrument panel wiring harness
- (B161) - Connection (anti-theft warning system), in wiring harness interior**

- * - Jetta only
- ** - Vehicles with anti-theft warning system only (see wiring diagram comfort system/ central locking)
- *** - Beginning November 2001
- **** - See also radio systems beginning August 2001
- - Through October 2001


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-35043

Light switch

- E1 - Light switch
- E18 - Rear Fog Light Switch
- L9 - Headlight Switch Light
- S236 - Fuse 36 in fuse holder
- T17 - 17-Pin Connector

----- Golf only

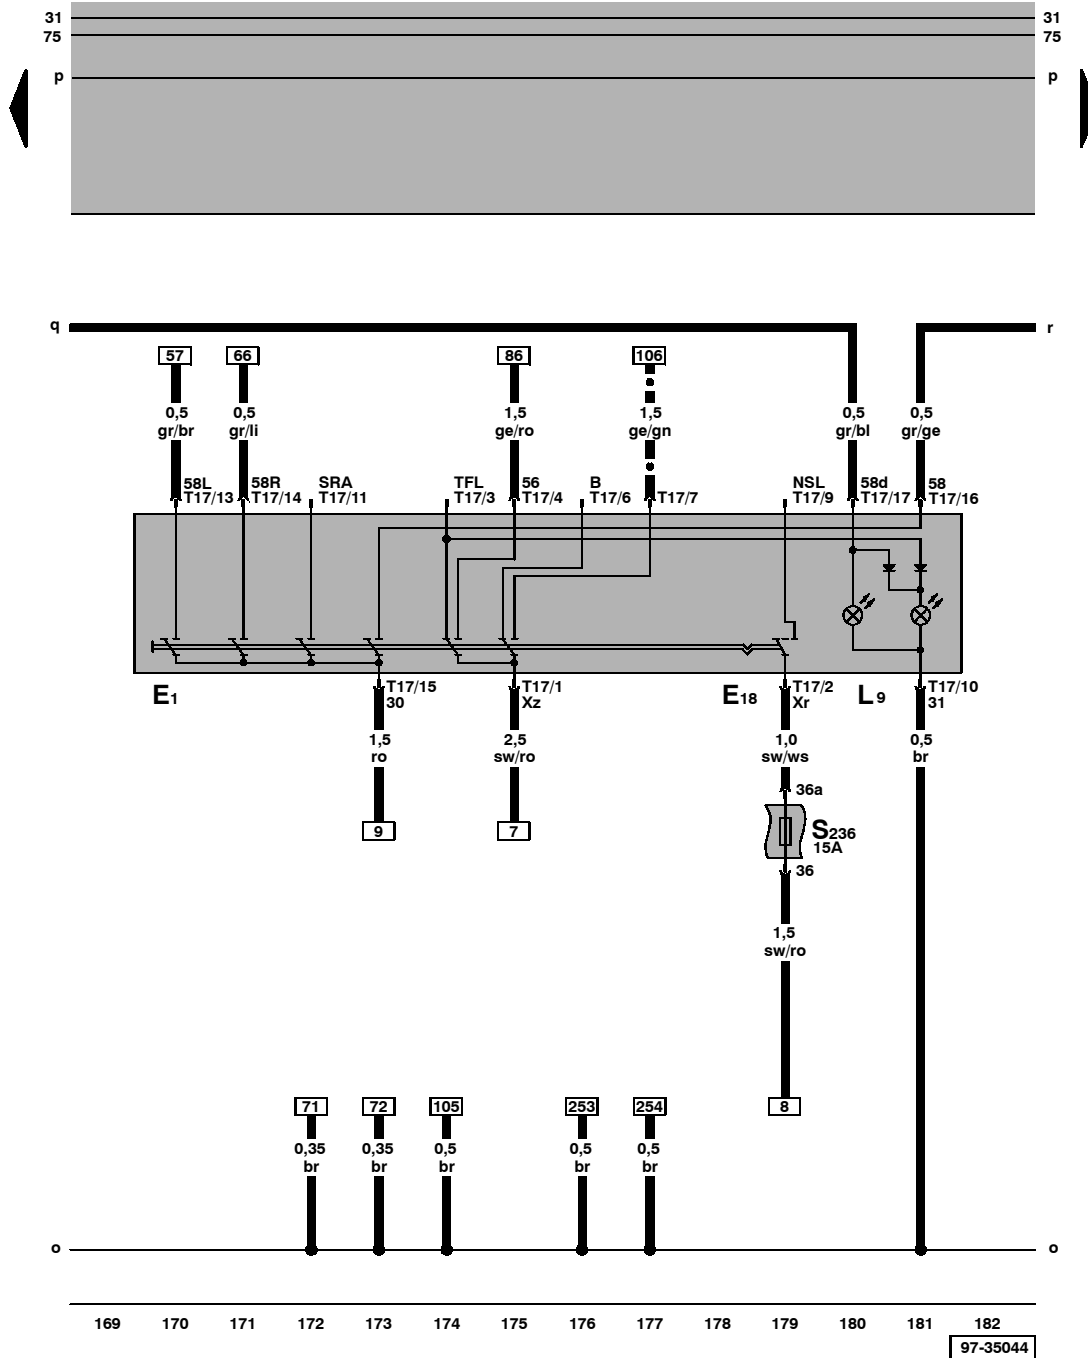


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange

License plate light, glove compartment light

- E26 - Glove compartment light switch
- S1 - Fuse 1 in fuse holder
- S3 - Fuse 3 in fuse holder
- S4 - Fuse 4 in fuse holder
- T2 - Double Connector, in luggage compartment, left (Golf only)
- T5 - 5-Pin Connector, black, connector station C-pillar, left
- W6 - Glove Compartment Light
- X - License Plate Light


- (50) - Ground connection, in luggage compartment, left
- (218) - Ground connection -1-, in rear lid wiring harness
- (A34) - Wire connection (75x), in instrument panel wiring harness
- (A37) - Wire connection (58a), in instrument panel wiring harness
- (W11) - Wire connection (58), in rear lid wiring harness
- (W41) - Plus connection (58), in wiring harness
- * - Jetta only
- - - - - Golf only

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

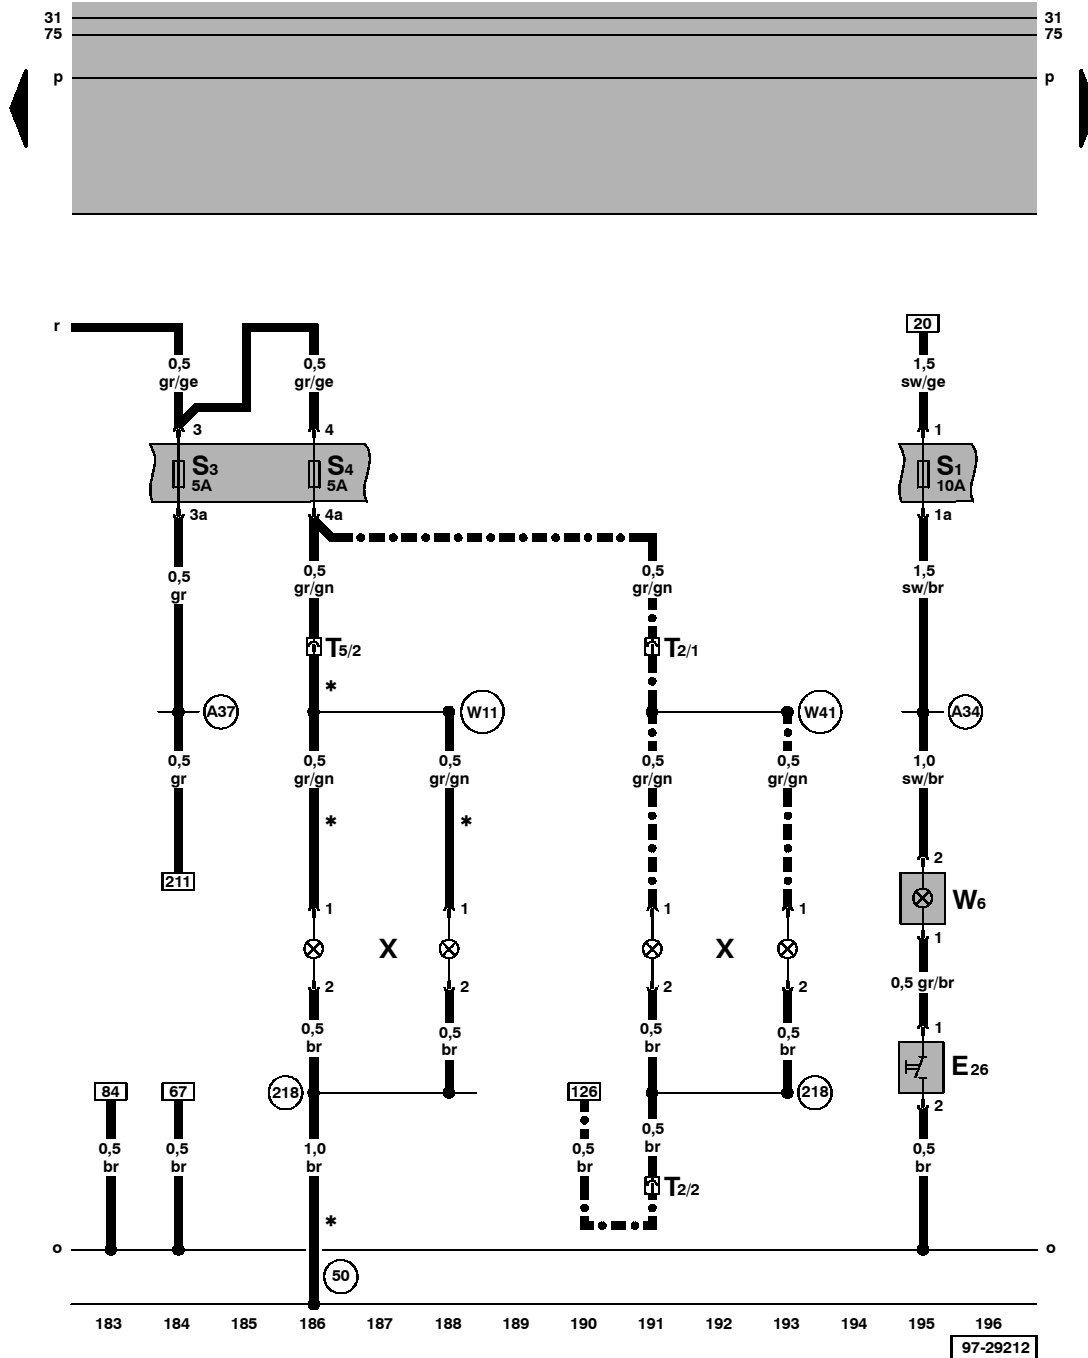

Dual tone horn, fuel tank door remote

- E204 - Switch for remote/fuel tank door (also see Comfort System with power windows wiring diagram)
 - F138 - Airbag Spiral Spring/Return Spring with Slip Ring
 - H - Signal horn activation
 - H1 - Dual tone horn
 - J4 - Dual Horn Relay
 - L76 - Push Button Light
 - T5b - 5-Pin Connector
 - T5j - 5-Pin Connector
 - T5r - 5-Pin Connector
 - T10i - 10-Pin Connector, black, connector station A-pillar, left
 - T10n - 10-Pin Connector, brown, connector station A-pillar, left
 - V155 - Motor for fuel tank lid unlock
- (205) - Ground connection, in driver's door wiring harness
 - (A90) - Connection (dual tone horn), in instrument panel wiring harness
 - (R51) - Connection (58b) in door wiring harness, driver side
- * - Manual transmission only, (not 2.0L-Engine - code BBW. Different wiring => wiring diagram Motor)

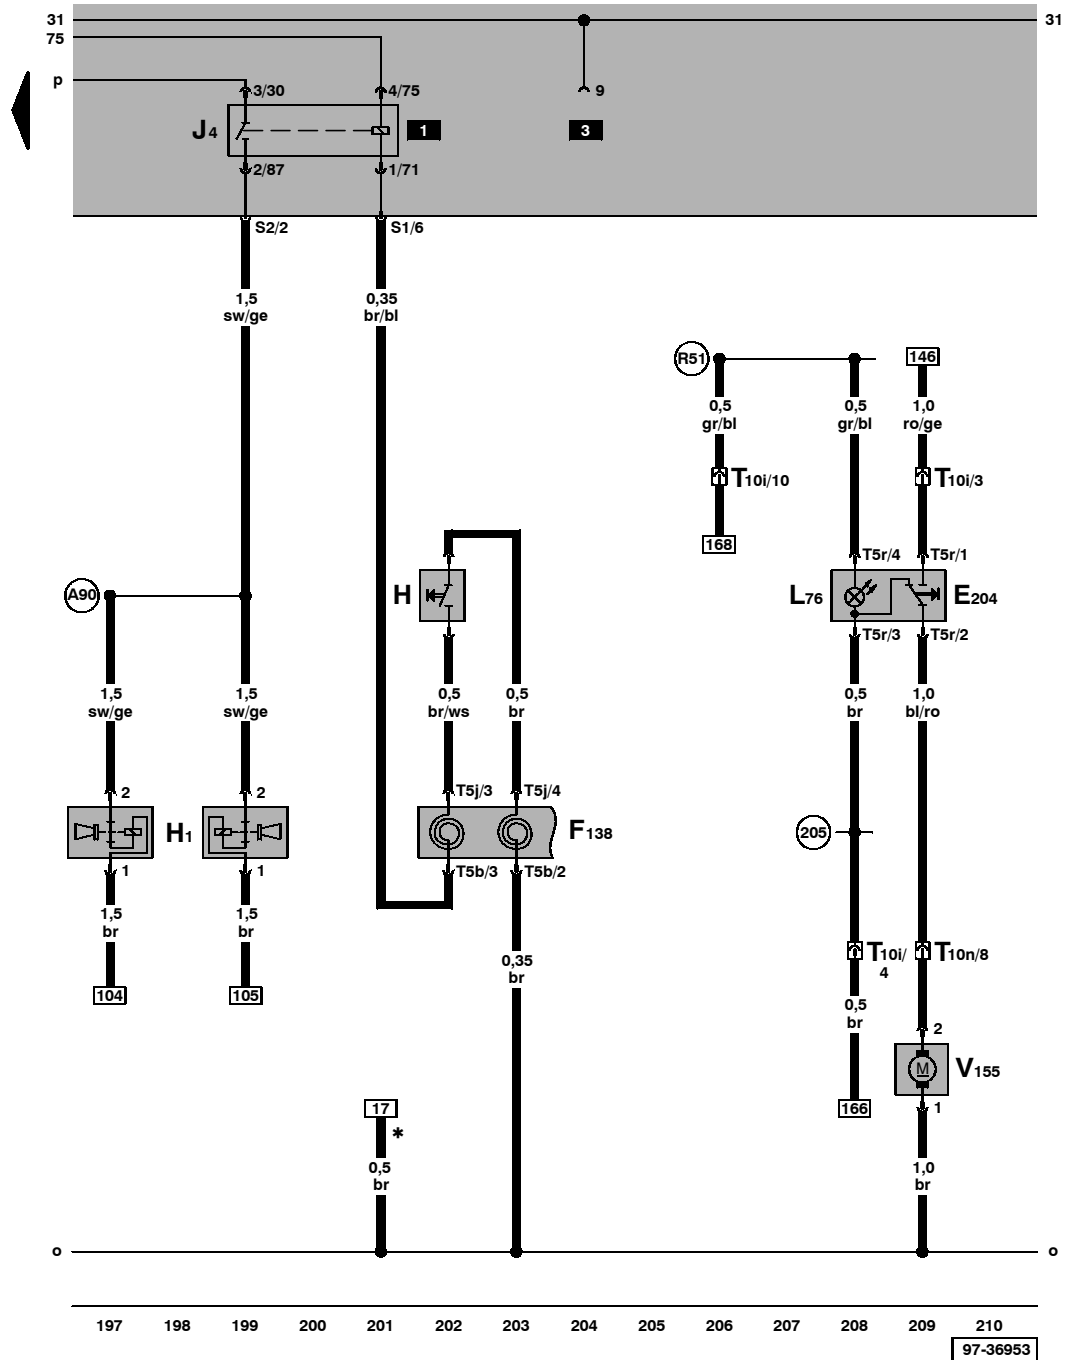


Motor for rear windshield wiper, windshield and rear window washer pump

- S224 - Fuse 24 in fuse holder
- S227 - Fuse 27 in fuse holder
- T5a - 5-Pin Connector, pink, connector station C-pillar, left
- T5h - 5-Pin Connector, near left A-pillar, lower part, in harness
- T5i - 5-Pin Connector, near left A-pillar, lower part, in harness
- V12 - Motor for rear windshield wiper
- V59 - Windshield and Rear Window Washer Pump

- (A96) - Connection (53a), in instrument panel wiring harness
- (A97) - Connection (53), in instrument panel wiring harness
- (A102) - Connection (windshield wiper), in instrument panel wiring harness

--- Golf only

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

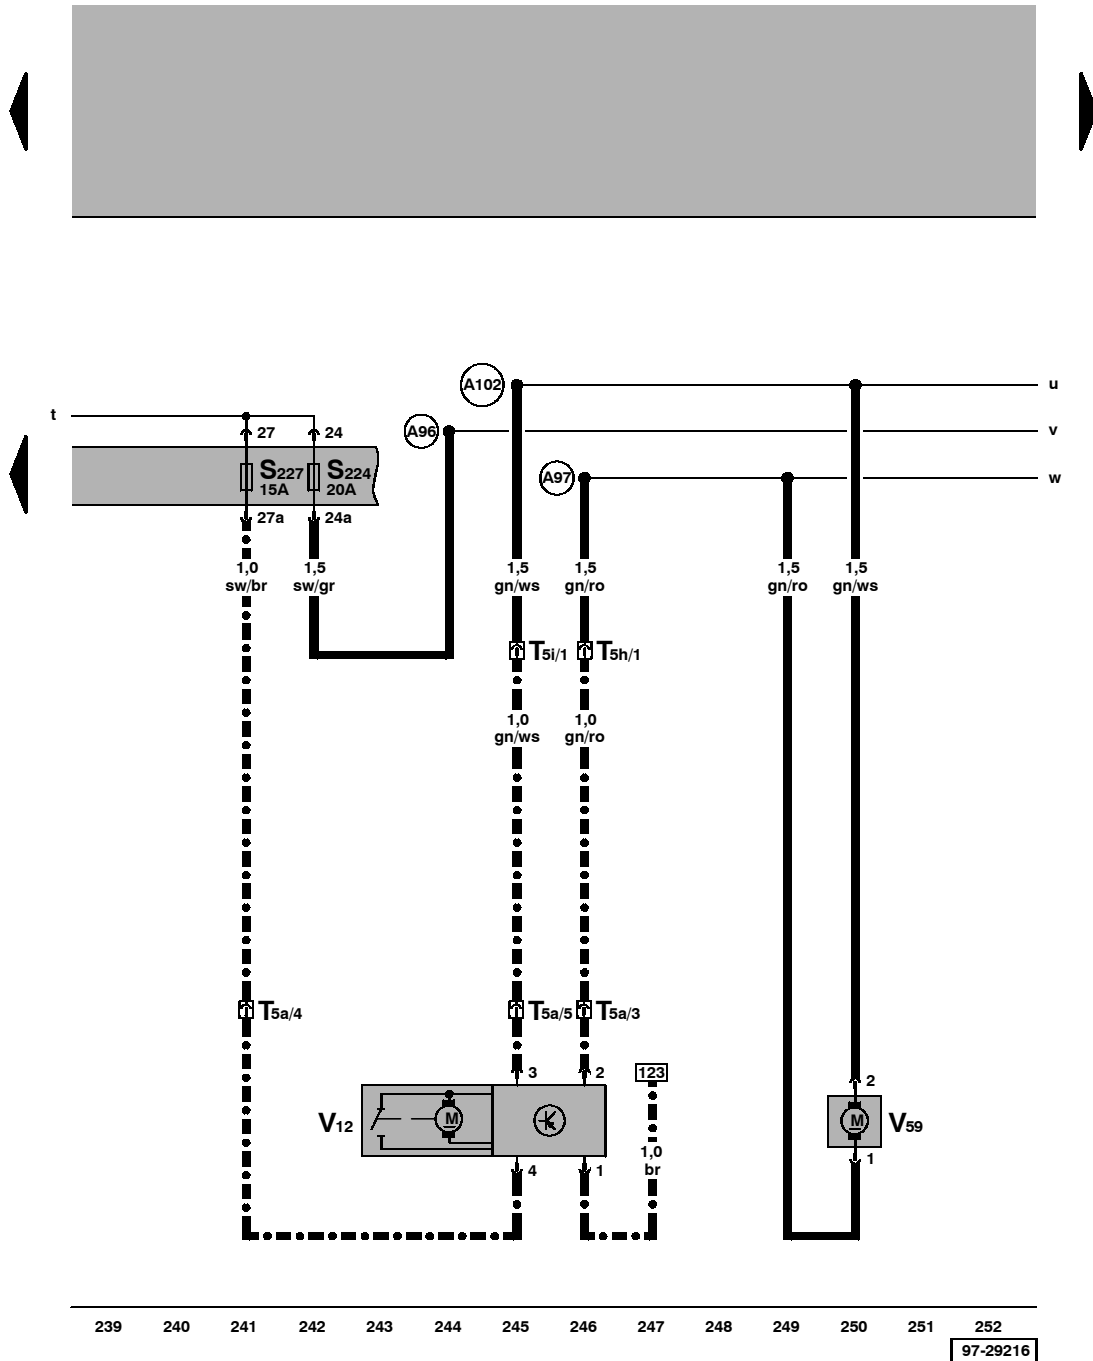

97-29216

Windshield wiper/washer switch, windshield wiper intermittent regulator, windshield wiper motor, wiper/washer intermittent relay

- E22 - Windshield Wiper/Washer Switch
- E38 - Windshield Wiper Intermittent Regulator
- J31 - Wiper/Washer Intermittent Relay, on relais panel
- T6e - 6-Pin Connector
- T8c - 8-Pin Connector
- T18a - 18-Pin Connector
- V - Windshield Wiper Motor

- (A96) - Connection (53a), in instrument panel wiring harness
- (A97) - Connection (53), in instrument panel wiring harness
- (A102) - Connection (windshield wiper), in instrument panel wiring harness

